ENGLISH

ILLUSTRATED MANUAL

Congratulations! You have just purchased a device with the SINTEX quality guarantee. Our products are the result of major investment in technology and innovation, aimed at satisfying the needs of our customers. To get the most out of the benefits of your TOP CLIMA SINTEX Fan we recommend you carefully read these instructions. Do not throw this manual away - store it for future consultation.

WARNINGS/PRECAUTIONS

For your safety and to guarantee the integrity of the device, read the recomendations below carefully A. Before connecting the fan to the outlet, check that the voltage is compatible with that indicated on the product (127V or 220V).

B. To avoid electrical overload, do not connect other devices to the same outlet using extensions or adapter plugs. C. Never handle the product with wet hands or submerge it in liquid or any other liquid.

D. Do not use the product if the electrical cord or plug are damaged.

E. Do not allow the electrical cord to hang off the desk or work surface or enter in contact with hot

surfaces.

F. Do not transport the product holding the electrical cord and do not remove the plug from the socket by pulling the cord.

G. Do not leave the product in operation or connected to the outlet unattended.

H. This product is not intended for the use by persons (including children) with reduced physical, sensory or mental capabilities, or lacking experience and knowledge on how to operate the device, unless they have received instructions regarding the use or under the supervision of a person responsible for their safety.

It is recommended that children be supervised to ensure that they are not playing with the device. I. Avoid contain and keep hair, clothing and other items away from the moving parts of the device.

J. Always use the product with the front grate installed. K. Check that the fan is located away from materials that could be sucked into the rear part, such as curtains or sheets.

L. If the power cord is damaged, it must be replaced by the manufacturer or an authorized agent or qualified person in order to avoid risks.

FEATURES

The TOP CLIMA SINTEX Fan was designed to provide maximum comfort for you and your family. Composed of light and resistant materials, the device facilitates transport and handling. Its main features are:


• Demountable product, facilitating transport.

• Horizontal oscillation system

• Removable blade and grate, facilitating cleaning.

Adjustable vertical inclination

• Selector with 3 speeds. • Blade with a diameter of 30 or 40 cm

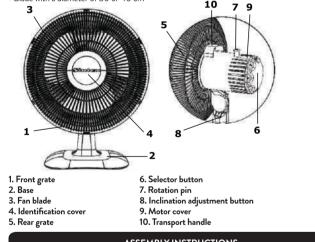

ASSEMBLY INSTRUCTIONS

A. Fitting the rear grate - position the coupling holes of the grate with the teeth on the motor cover. Tighten to the end or until you hear a click. Attach the grate with two screws on the motor cover. B. Fan blade assembly - fit the blade onto the shaft of the motor, paying attention to the positioning device on the part. Attach c. Fitting the front grate - position the coupling holes of the grate with the teeth on the motor cover. Tighten to the end or until you hear a click.

D. Assembly of the base - Pass the power cable through the shaft of the base and position the parts. Tighten to the end or until you hear a click.

ACTIVATING THE DEVICE:

• Position the fan on a flat and stable surface;

• Before turning on the fan, check that it has been assembled in accordance with the instructions in this manual.

• Check the voltage of the network is compatible with the device.



NEVER TURN ON THE FAN WITHOUT THE FRONT GRATE INSTALLED. RISK OF ACCIDENT WITH POSSIBLE INJURY.

SELECTING THE SPEED

• The speed selector is positioned on the rear part of the motor cover (Features - Item 6). • To turn on the product, select one of the three speeds (I, II or III).

OSCILLATING SYSTEM:

• To activate the horizontal oscillation system, press the rotation pin located on the upper part of the motor cover (Features - Item 7).

• To turn off the system, pull the rotation pin fully upwards by hand.

INCLINATION

• To adjust the inclination of the fan, press the button located on the base of the mobile support (Features - item 8) and adjust the position as required

CLEANING INSTRUCTIONSt

• Switch off the device and remove the plug from the socket. • Remove the front grid by introducing the tip of a screwdriver in each of the tabs located on the edge of the part.

• Remove the blade by loosening the front fastening nut with the aid of universal pliers;

• Use a soft, damp cloth with water or water and neutral soap for cleaning. Do not use abrasive products that could damage the product's appearance.

NEVER WASH THE MOTOR BLOCK of the device as this could seriously damage the product.

TROUBLESHOOTING					
PROBLEM	CAUSES	SOLUTION			
Product smells	Varnish applied for the motor insulation.	The smell occurs within maximum 72 hour of use. It is normal due to the varnish applied for the motor insulation. It is not normal if it is an overheating smell from the motor.			
Product does not turn on	There is no power supply	Connect the device to another outlet at the same voltage to confirm the abnormality.			
Excessive vibration	Device supported on an irregular surface. Place the device in an appropriate, level location.				
It is not possible to mount the motor block on the support base	Parts misaligned	Carefully check the correct position for fitting the parts before exerting force to hear the click.			
It is not possible to adjust the inclination upwards or downwards	Inappropriate handling of the inclination adjustment button	Check you are following the instructions for adjusting the inclination using the button positioned at the neck of the product			

TECHNICAL CHARACTERISTICS

MODEL	DIMENSIONS		VOLTAGE (V)	WEIGHT (kg)
	Blade (mm)	Grate (mm)		
VM 130	300	400	127	1,9
VM 230	300	400	220	1,9
VM 140	400	500	127	2,1
VM 240	400	500	220	2,1

WARRANTY CERTIFICATE

• SINTEX warranties this product against possible manufacturing defects for 12 months, including the statutory warranty, from the date on the tax invoice.

. This warranty covers, exclusively, the replacement and/or repair of parts proven to present manufacturing or material defects.

• Defects from incorrect and/or inadequate installation are not covered by the warranty


• The warranty shall be automatically canceled if the device suffers damages resulting from accidents, use of the wrong voltage and voltages subject to excessive fluctuations or, if there are signs of violation or repair by unauthorized persons


• The power supply cords, as well as other components of the device, should only be replaced by the technical assistance service.

• SINTEX shall not be responsible for damages caused by the device and/or user as a result of noncompliance with the safety standards contained in this manual.



CNPJ 75.344.937/0001-83 (47) 3473-5555

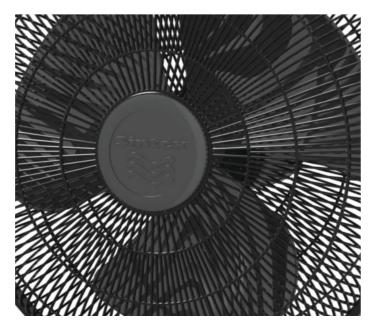

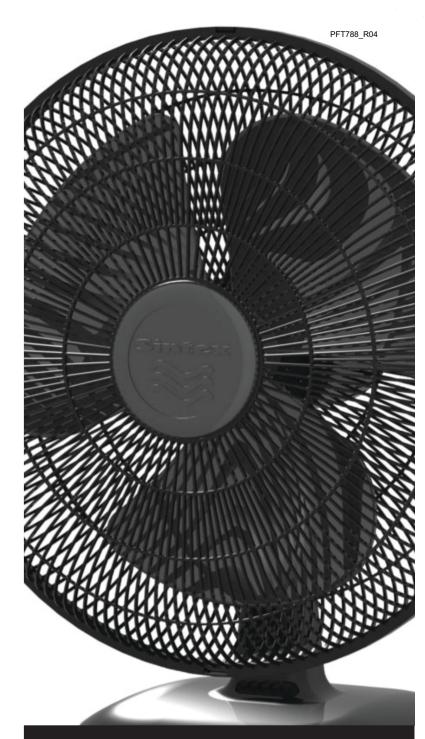

MANUAL DE INSTRUÇÕES

VENTILADOR **TOP CLIMA**

